

DeepSizer 300

Your Essential Tool for Sediment Insight



Your Essential Tool for Sediment Insight

The DeepSizer 300 is a submersible particle size analyzer for real-time sediment monitoring in rivers, lakes, estuaries, and coastal waters. It measures concentrations from 0.001 to 100 g/L and particle sizes from 0.1 to 2000 μm with high accuracy.

Powered by six core technologies—including two patented innovations, Differential Path and Adaptive Path Technologies—it adapts to diverse conditions and remains reliable even in extreme environments.

DeepSizer 300 overcomes the risks, delays, inaccuracies, and maintenance burdens of traditional sediment analysis. It delivers trusted insights for sediment studies, ecological monitoring, water-quality assessment, and hydraulic engineering—supporting resilient, sustainable water systems.



Safer In-situ Measurement

Challenge: Traditional sampling is labor-intensive, time-consuming, and exposes personnel to potential health and safety risks.

Solution: DeepSizer 300 enables direct in-situ measurement, cutting sampling risks and providing reliable, continuous data for ecosystems, pollutant tracking, and water safety.



Real-time Sediment Monitoring

Challenge: Conventional methods are too slow to track short-lived spikes in sediment concentration during floods and typhoons.

Solution: DeepSizer 300 provides real-time measurements of concentration and PSD, capturing critical flood events to support early warning and protect communities.



Accurate Results in High Turbidity

Challenge: Common optical and acoustic methods lose accuracy in highly turbid waters, limiting their reliability for sediment management.

Solution: DeepSizer 300 combines adaptive sediment concentration measurement with advanced multiple-scattering correction, ensuring accurate results even under extreme sediment loads.



Reliable Long-term Field Deployment


Challenge: Extended field campaigns often suffer from window fouling, biofilm growth, and sediment deposits, leading to poor data quality and high maintenance costs.

Solution: DeepSizer 300 features automatic window cleaning and intelligent background correction, enabling long-term unattended operation with high-quality data.



Transboundary River Monitoring for Flood Risk and Sediment Dynamics

Successfully deployed at the Dandong Huanggou Hydrological Station in 2025, the DeepSizer 300 is a key instrument for monitoring on the Yalu River. Used for daily suspended sediment concentration monitoring, the instrument's results consistently aligned with those from the traditional gravimetric method, enhancing the station's operational efficiency and data reliability. In August, its real-time monitoring capabilities provided early warnings for heavy rainfall, offering vital data that enabled local authorities to take swift, informed actions to mitigate potential flood risks.

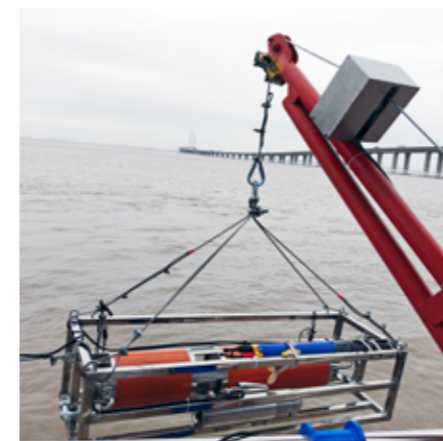

Tidal River Mouth Monitoring for Marine Sediment Characterization

In 2025, the DeepSizer 300 was deployed at the Chongming Marine Station platform to monitor suspended sediment concentrations and particle size distribution in tidal river sections. During comparison tests in March, hourly water samples were collected and analyzed using the gravimetric method. The concentration readings from the DeepSizer 300 closely matched manual results, confirming its accuracy and reliability. Furthermore, its ability to provide particle size distribution and key parameters like D10, D50, and D90 has proven invaluable for marine monitoring. This data supports forecasting of tidal movements, offering essential insights into coastal and riverine water conditions.


Core Technologies for Trusted Insights

Particle Size Distribution Measurement

The DeepSizer 300 employs an array of 80 photoelectric detectors to capture the scattering pattern produced as laser light interacts with particles. The detected signals are converted into electrical outputs and processed by advanced software. By applying Mie scattering theory with robust mathematical inversion, the system delivers precise and comprehensive particle size distributions in real time.

Concentration Measurement

Concentration is determined based on the extinction principle: light attenuation is directly proportional to concentration and inversely related to particle size. By analyzing this attenuation, the instrument calculates volumetric and mass concentrations, delivering reliable results in real time.

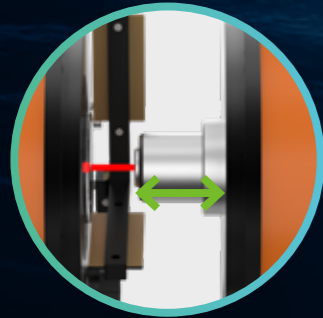

Adaptive Path Technology

Utilizes patented technology to automatically adjust the optical path length for varying sediment concentration levels, thereby ensuring measurement accuracy.


- **Wide adaptability** – delivers accurate results across the full concentration range (0.001–100 g/L)
- **Consistent precision** – maintains optimal particle count accuracy under changing conditions



Automatic Optical Window Cleaning

With its integrated cleaning system, removes deposits and contaminants from the optical windows, keeping the instrument in optimal condition.

- **Reliable results** – prevents fouling to ensure consistent, high-quality results
- **Lower maintenance** – reduces manual cleaning, saving time and labor

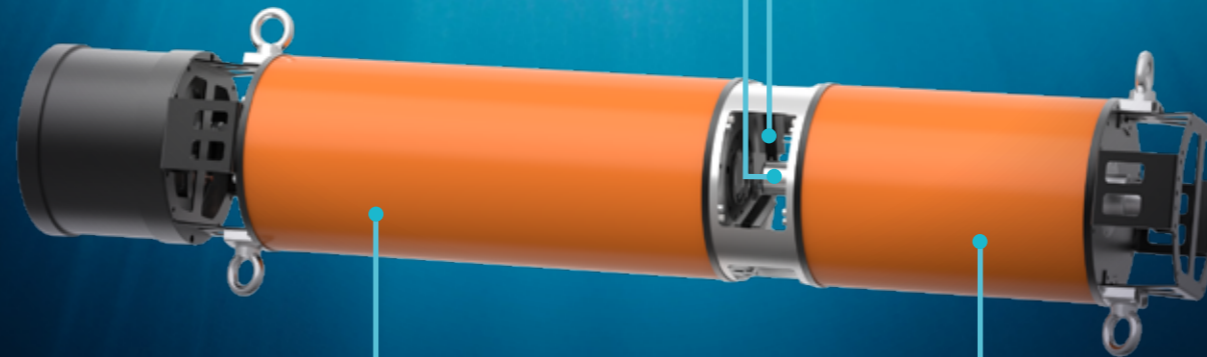

Flexible Transmission Modes

Offers three transmission modes—wired, wireless, and offline—to adapt to diverse monitoring scenarios.

- **Reliable delivery** – ensures data integrity in both real-time and post-test workflows
- **Easy integration** – simplifies integration with hydrological stations, research networks, and monitoring centers

Multiple Scattering Correction


Incorporates advanced correction algorithms that minimize multiple scattering effects, thereby solving the problem of excessively high concentrations even after reducing the optical path length.

- **Accurate results** – corrects signal distortion caused by multiple scattering
- **High reliability** – delivers trustworthy particle size and concentration data under high turbidity

Differential Path Technology

Applies patented technology, subtracting short-path signals from long-path signals to isolate pure sediment scattering and eliminate noise and contamination effects.

- **Trusted accuracy** – precise particle size and concentration data without background interference

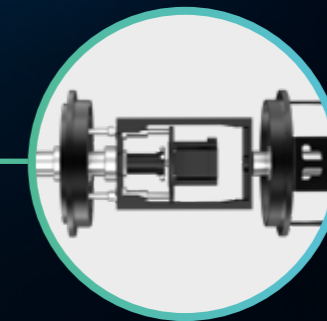


Water Pressure Compensation

Employs sealed metal tubes and telescopic structures at both ends to automatically balance hydrostatic pressure, ensuring stable operation down to 200 meters.

- **Stable operation** – reliable performance even under high-pressure conditions
- **Extended usability** – smooth optical path length adjustment, suitable for deeper waters and long-term deployments

Intelligent Software and Workflow

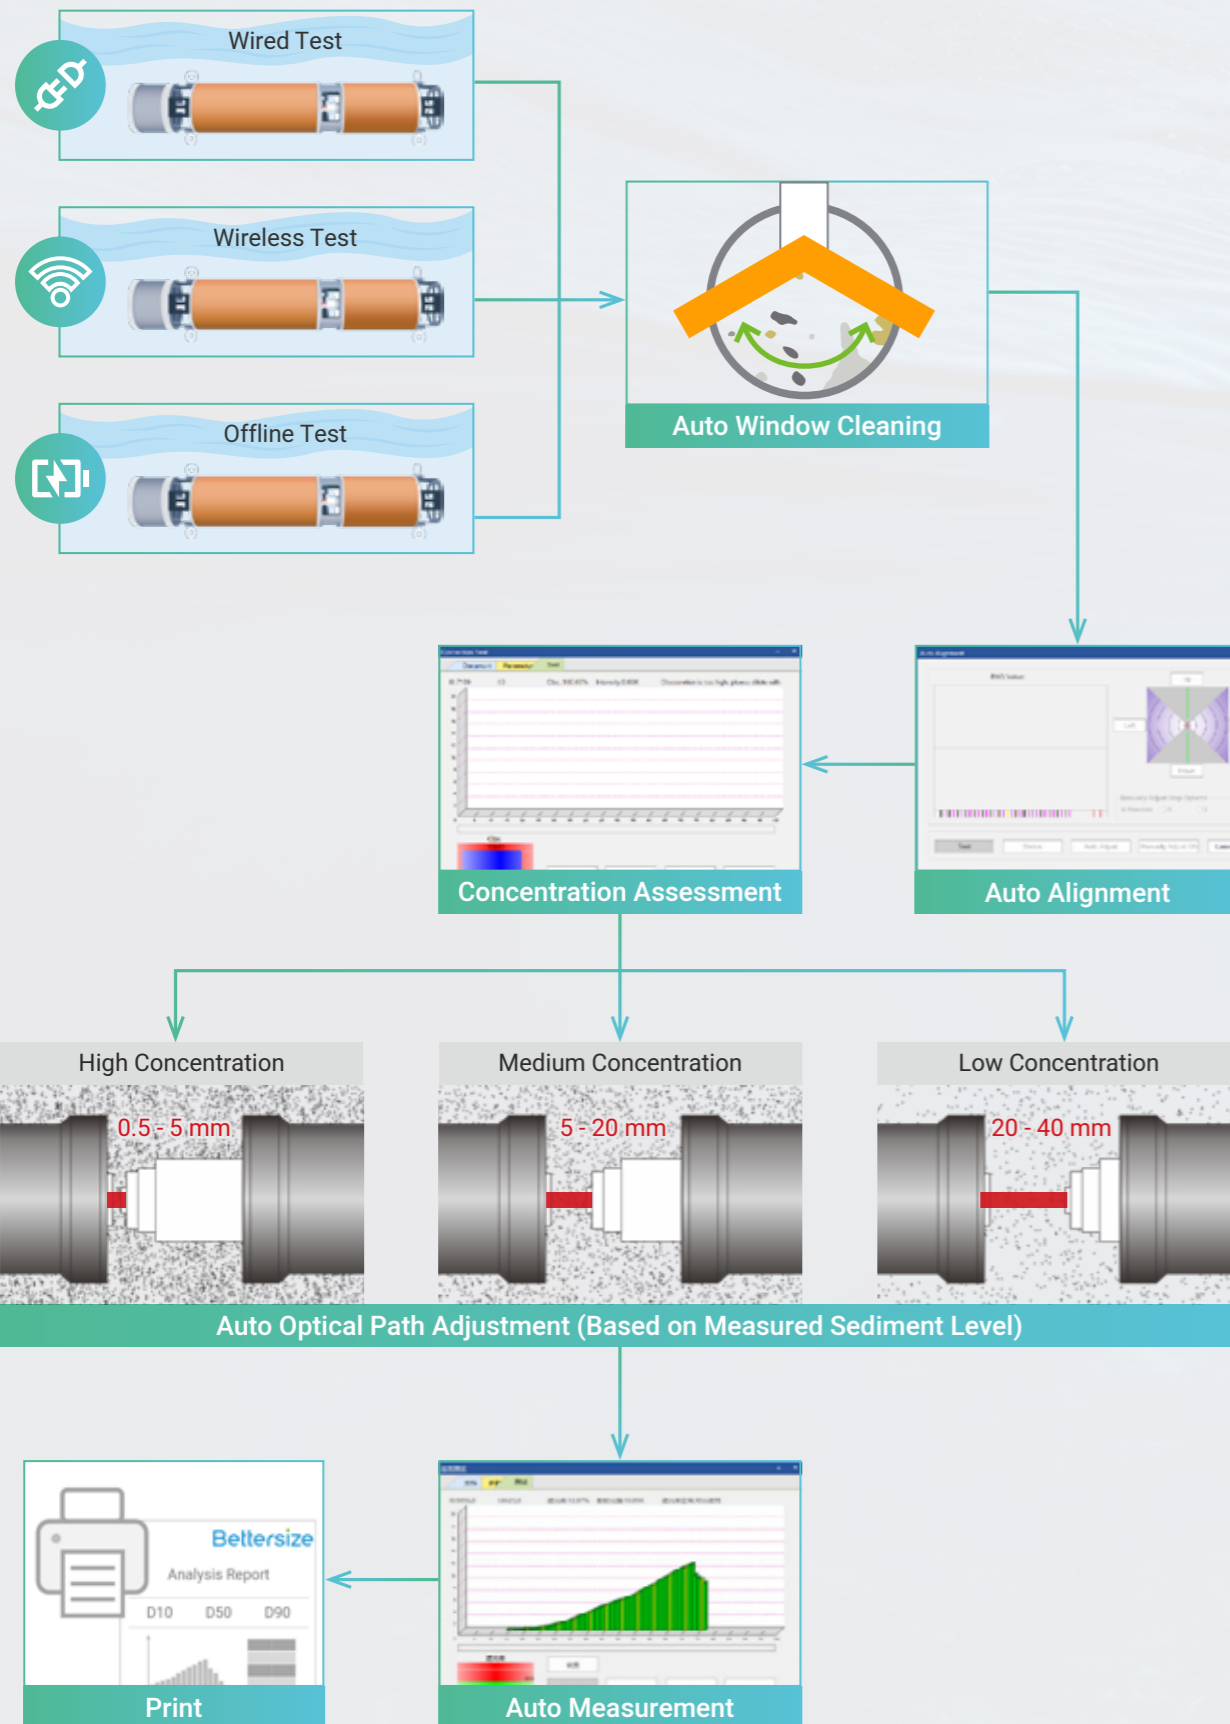


Transmission Modes



Wired

Real-time data transmission and control via RS485 cable connection. Ideal for stations with stable power supply and convenient indoor access.

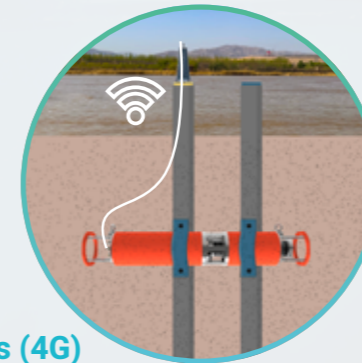

Wireless (4G)

Remote control and data transfer through 4G - suitable for sites with reliable coverage and external power availability.



Offline

Autonomous measurements with onboard storage. Designed for mobile deployments without stable power or network - battery-powered, easy to deploy and retrieve.

Applications

Hydrology & Hydraulic Engineering

Floods can trigger sudden surges in sediment that endanger communities, while long-term siltation reduces reservoir storage and hydropower efficiency.

The DeepSizer 300 delivers real-time, in-situ sediment data, helping you forecast floods more accurately, manage reservoirs more effectively, and optimize hydraulic engineering operations.

Environmental & Ecological Monitoring

Suspended sediments carry pollutants and microplastics that threaten water quality and ecosystem health.

The DeepSizer 300 enables continuous, in-situ monitoring, giving you reliable data to safeguard drinking-water sources, track contaminant pathways, and support effective environmental protection.

Scientific Research

Sediment transport and deposition are central to hydrodynamics and environmental science, yet manual sampling cannot deliver the detail or continuity researchers need.

The DeepSizer 300 provides high-resolution, real-time datasets on sediment concentration and particle size, empowering you to reveal sediment dynamics, validate models, and advance scientific discovery.

Parameters Measured

Particle size distribution, total mass concentration, depth, temperature, conductivity

Measurement Performance

Concentration range	0.001 - 100 g/L (kg/m ³)
Particle size range	0.1 - 2000 µm *
Particle size accuracy	≤ 2% *
Particle size repeatability	≤ 2% *
Depth sensor	0 - 200 m
Temperature sensor	-20 - 85°C

Main Unit

Laser source	10 mW, 635 nm
Detector	80 detectors
Measuring angle range	0.0163 - 42°
Optical path length range	0.5 - 40 mm
Depth rating	200 m
Protection level	IP 68
Automatic optical window cleaning	Available, programmable cleaning

System

Transmission modes	Wired / Wireless (4G) / Offline
Battery runtime	24 hours
Memory capacity	16 GB
Operating temperature	0 - 55°C
Instrument dimensions (L x W x H)	970 x 189 x 189 mm
Weight	20 kg

Computer Configuration (Recommended)

Computer interface	At least one high-speed USB 2.0 or USB 3.0 port required
Operating system	Windows 10 or above
Hardware specification	Intel Core i5 Processor, 8GB RAM, 512 GB SSD, 1920 x 1080 (Full HD)

*Sample dependent

Bettersize
BETTER PARTICLE SIZE SOLUTIONS



BREAKING
BOUNDARIES
SHAPING
THE FUTURE

Bettersize Instruments Ltd.

No. 9, Ganquan Road, Jinquan Industrial Park,
Dandong, Liaoning, China
Postcode: 118009
Tel: +86-755-26926582

Bettersize Inc.

3185 Airway Ave, Ste C2, Costa Mesa, CA
92626, United States
Tel: +1 833-699-7493 (SIZE)



Visit Our DeepSizer 300 Site



Visit Our Official YouTube Channel

info@bettersize.com
www.bettersizeinstruments.com

Disclaimer: By using or accessing any materials provided by Bettersize Instruments Ltd. in electronic format, you agree to the Disclaimer without any qualification or limitation. While diligent care has been taken to ensure the accuracy of the information contained herein, Bettersize Instruments Ltd. shall not be liable for any errors or damages in connection with the use of these materials. The information is provided as general information, and no representation or warranty, whether express or implied, is made as to its accuracy, completeness, or correctness. It does not constitute part of a legal offer or contract. Bettersize Instruments Ltd. reserves the right to modify, alter, add, and delete the content outlined in these materials without prior notice and without any subsequent liability to the company.

Copyright: © 2025 Bettersize Instruments Ltd. | All Rights Reserved
13.0119.00.01